

User Manual Book Sterilizer & Dryer

Purificare Series
SD 0630 U

TABLE OF CONTENT

Part 1: Safety Information	3
Safety Precaution	3
Environmental Notice	5
Part 2: Name of Parts	6
Part 3: Quick Start Guide	7
Water Collection Box	7
Storing Tableware	7
Front Cover	7
Setting The Timer	8
Operating Mode	8
Panel Control	8
Initial Use	8
Function Mode	8
Other Display	10
Child Lock Button	10
Part 4: Maintenance	10
Cleaning	10
Part 5: Troubleshooting	11
Part 6: Specification	12





This guide book explains everything you need to know about your new product. Please contact our Customer Care should you need further assistance through www.modena.com

PART 1: SAFETY INFORMATION

Safety Precaution




- Read this manual book carefully!
- This precautions shown to ensure the safe and proper use of the product and to prevent injury and damage to user or other. The level of the harm, the damage, the urgency and the safety precaution caused by improper handling are divided into two: "Warning" and "Caution". Make sure to follow all of them for it is important to ensure the safety.
- Cases where improper handling of the appliance could lead to death or serious injury are listed under the WARNING.
- Cases that could also lead to serious result is listed under the CAUTION.






Description of Illustration

		This symbol shows a prohibited action. More specific details are shown inside or near it. (In this case, do not disassemble).
		This symbol shows a direct action. More specific details are shown inside or near it. (In this case, disconnect the power plug from the outlet).






- After reading this manual book, make sure to keep it where the user can find it anytime.

ATTENTION!

	Clean the power plug.
	Wipe off any dust on the power cord's head and branch surface. Connecting dirty cord may lead to a short circuit or fire.
	Insert the power plug into the outlet properly. Failure to do so may cause an electric shock, short circuit, fire or smoke.

	<p>Use the power outlet with no other device connected. Do not use an extension cord. If the appliance is used with other device, the branch of the outlet lead. Jika peranti digunakan bersamaan dengan perangkat lain, cabang dari steker daya dapat menghasilkan panas yang tidak wajar yang dapat menyebabkan kebakaran.</p>
	<p>Keep the power plug away from children Failure to do so may cause an electric shock or injury.</p>
	<p>Do not damage, break, modify, forcibly bend, pull, twist, use springs, place heavy objects, pinch nor bring the power cord near the hot area. Failure to do so may cause a fire or electric shock. Do not use if the power cord or plug is damaged or loose when inserted into the outlet. Failure to do so may cause electric shock, short circuit or fire.</p>
	<p>Do not use near flammable materials such as curtain. There is a risk of fire.</p>
	<p>Do not let children use the appliance without the adults' supervision and do not use within the reach of children. There are a risk of burns, electric shock and injury.</p>

CAUTION!

	<p>Clean after the appliance has cooled down. Touching the hot parts may cause burn.</p>
	<p>When disconnecting the power cord, hold and pull it from the head without pulling the cord. Failure to do so may cause an electric shock, short circuit and fire.</p>
	<p>Unplug the power cord from the outlet when it's not used. Failure to do so can cause injury, burn, electric shock caused by the insulation's deterioration and fire as well caused by the short circuit.</p>
	<p>Do not place the appliance where there is a gas stove or hot air. Failure to do so may cause a fire and deformation.</p>
	<p>Do not touch the tableware during the operation or immediately after used. Failure to do so may cause burns.</p>



- Place the appliance on the horizontal surface.
- Do not use near the flame of gas stove, a place where there is gas container and a sprayer can.
- Wipe the dust that stuck in between of the power plug.
- Do not cover the exhaust hole on the top.
- Do not put the plastic tableware near the heat and plastic bag into the appliance.

Environmental Notice



The packaging material used is recyclable. We recommend that you separate plastic, paper and cardboard and give them to recycling agents. According to WEEE (Waste of Electrical and Electronic Equipment) guidelines, waste from electrical and electronic devices should be collected separately. If you need to remove of this appliance in the future, do not throw it away with the rest of your domestic garbage. Instead, please take the appliance to the nearest WEEE collecting agents, where available.

PART 2: NAME OF PARTS

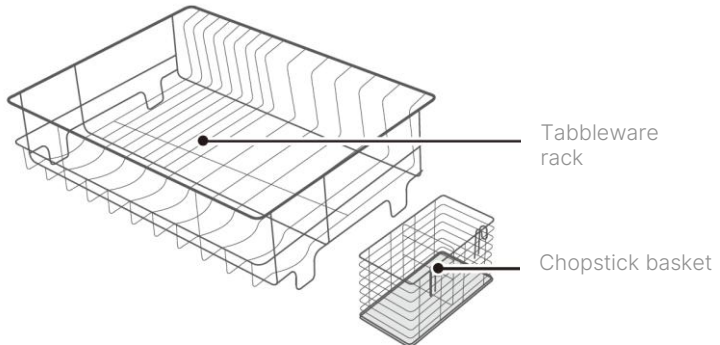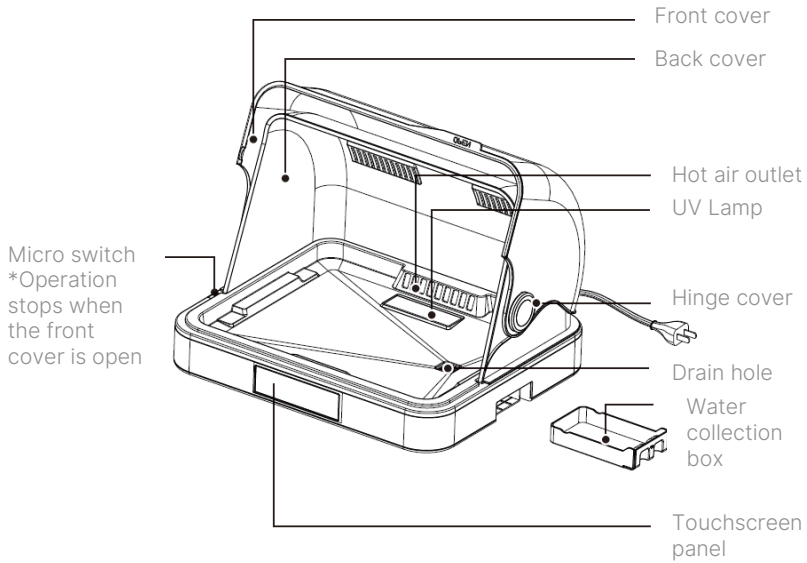

PART 3: QUICK START GUIDE

Water Collection Box

Check the water collection box when the pipe hose is not used.

- Discard the water before use.
- Set the water collection box back to the body.

Check the water collection box when using the drain hose.

- Attach the drain hose to the water.
- Set the water collection box back to the body.
- Install the appliance near the sink so the water will flow out of the drain hose.

Storing Tableware

- Drain the excessive water from the washed dishes before putting them inside the dryer. (Water may overflow from the water collection box).
- Use the appliance as its function and purpose for tableware rack only. (Using the appliance for other purpose may lead to malfunction and void the warranty).


CAUTION!

Do not put knives inside the appliance. This can cause injury.


Front Cover

- Pastikan penutup depan tertutup.
- Plug the power plug into the outlet.

Setting The Timer

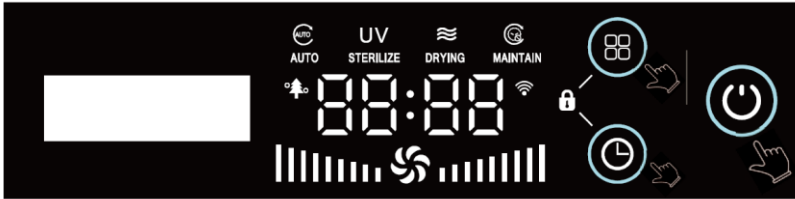

Operating Mode

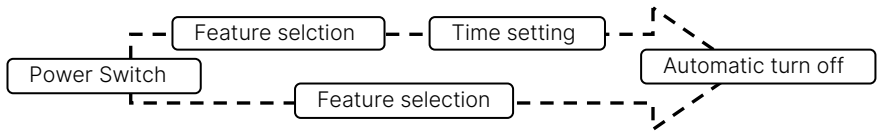

Panel Control



Initial Use

- During the appliance is turning on, all the indicator lights and the LED screen will be on. After one second, the LED screen will be off and enter the standby mode.

Function Mode

Press the power button to enter the start up mode. Function button, timer button is on. Press the function button to select the desired mode. Mode: automatic, sterilize, drying, storage. If there is no button pressed for 5 seconds, it will enter the automatic mode.

Automatic mode

Press the “auto” button and the indicator light will be on. The screen will display three different time options: 41, 51 and 60 minutes. Press the time button to select the desired time. If there is no button pressed for 5 seconds, the appliance will run and the countdown will begin. After finished, it will enter the standby mode. (Fan, heating function and UV lamp are running simultaneously).

Sterilize mode


Press the “sterilize” button and the indicator light will be on. The screen will display three different time options: 11, 16 and 21 minutes. Press the timer button to select the desired time. If there is no button pressed for 5 seconds, the appliance will run and the countdown will begin. After finished, it will enter the standby mode. The UV lamp is on.

Drying mode

Press the “drying” button and the indicator light will be on. The screen will display three different time options: 31, 41 and 51 minutes. Press the timer button to select the desired time. After 5 seconds if there is no button pressed, the appliance will run and the countdown will begin. After finished, it will enter the standby mode. Fan and the heating function are on.

Storage mode

Press the “maintain” button and the indicator light will be on. The screen will display time option. In the first 2 hours, all the function will run for 30 minutes. The UV and fan will be on for 5 minutes every 2 hours with the total of 72 hours. After finished, it will enter the standby mode.

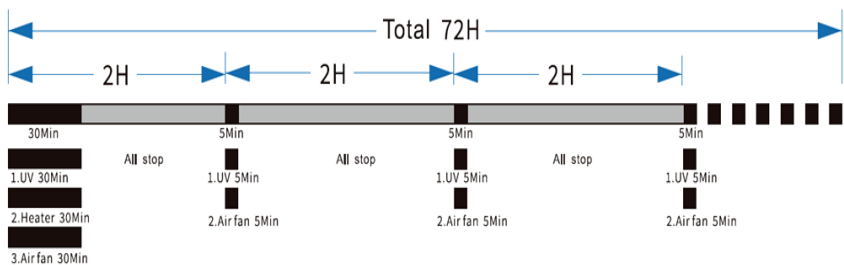

Other Display

- During the operation, the light bar will be on one by one from the middle to the both side. The cycle will continue until the operation is finished. When it is finished, the buzzer will ring 5 times.
- When the fan is running, the fan indicator light will be on until the operation is finished.

Child Lock Button

Press the function button and timer button at the same time to activate the child lock button. The child lock button indicator light will be on. During this mode, each button is not active. To cancel the child lock button, press again the function button and timer button at the same time.

PART 4: MAINTENANCE

Cleaning

Please disconnect the power plug from the power socket and let the appliance cool down before cleaning.

1. Wipe off the appliance with a soft cloth soaked in soap water.
2. Wipe with dry towel to dry it.
3. Do not wash the appliance directly with water.
4. Please keep the tableware and chopstick basket clean regularly.

CAUTION!

Do not use alkaline and abrasive detergent, benzene, thinner and alcohol to prevent deterioration and discoloration.

PART 5: TROUBLESHOOTING

Sebelum menghubungi perwakilan layanan Anda, periksa hal-hal berikut:

Masalah	Kemungkinan Penyebab	Tindakan Yang Direkomendasikan
Appliance won't work	<ul style="list-style-type: none"> • Is the front cover closed properly? • Is the switch is pressed? 	Close the front cover properly
	<ul style="list-style-type: none"> • Is there a power failure? • Is the power cord is connected properly? 	When the power is on, plug it properly
The appliance won't dry	<ul style="list-style-type: none"> • Is there any failure with the machine? • Is there an overheating? 	Repair or change
UV Lamp won't turn on	<ul style="list-style-type: none"> • Is there any failures with the machine? • Is there an overheating? 	Repair or change

If the problems still occur after checking the table above, disconnect the power plug from the outlet immediately. Contact the dealer where you purchased the appliance.

PART 6: SPECIFICATION

Model	SD 0630 U
Color	Blue
Type	Sterilizer & Dryer
Sterilization	UV & Ozone
Drying temperature (°C)	75±5
Rack material	SUS 201
Drying time (minutes)	10-60
Rated power input (Watt)	260
Rated voltage	220V/50Hz
Product dimension (W×D×H)(mm)	495×409×362
Product weight (kg)	5

S = Stainless, R = Red, C = Cream, O = Orange, N = Green, U = Blue, W = White, V = Silver, G = Grey, L = Black

Design and specification can change without prior notice to improve the quality of the product. The illustration in this manual is schematic and can be different with your actual product. The values on label or in other documents are according to laboratory test and relevant standards. Values can vary depending on the actual operational and environmental condition of the product.

Ciao! **MODENA**

www.modena.com

PT MODENA INDONESIA

Jl. Industri Raya I Blok D-8,
Jatiuwung, Tangerang 15135